



**SunCool Energy
Company**

DO NOT COMPLETE THESE STEPS UNTIL BI-DIRECTIONAL METER IS INSTALL BY YOUR UTILITY COMPANY STEP BY STEP GUIDE TO TURNING ON YOUR MICRO-INVERTER PHOTOVOLTAIC SYSTEM

STEP 1. TURN AC DISCONNECT TO THE “ON” POSITION. WILL BE LABELED WITH “PHOTOVOLTAIC SYSTEM DISCONNECT”. DISCONNECT IS OPERATED WITH PULL OUT HANDLE INSIDE THE BOX (PHOTO A) OR A LEVER ON THE OUTSIDE OF THE BOX (PHOTO B)



Photo A



Photo B

STEP 2. TURN BREAKERS LABELED PHOTOVOLTAIC SOLAR BREAKERS IN PV SUB PANEL (PHOTO C), TO THE “ON” POSITION. (SMALLER PHOTOVOLTAIC SYSTEMS WILL NOT HAVE PV SUBPANEL, IF NO SUB PANEL GO TO STEP 3) PHOTO C



Photo C

STEP 3. TURN ON BREAKER LABLED PHOTOVOLTAIC SOLAR BREAKERS IN MAIN SERVICE PANEL (MSP) TO THE "ON" POSITION (PHOTO D). (SOME SYSTEMS, DEPENDING ON SIZE AND MSP CAPACITY WILL NOT HAVE PHOTOVOLTAIC SOLAR BREAKERS IN THE MSP. IN THIS CASE, THE SYSTEM IS LIVE AFTER STEPS 1 AND 2) PHOTO D



Photo D

Any questions or concerns about this process, please contact 772-631-1243 or greg@suncoolenergy.com

