



**SunCool Energy
Company**

DO NOT COMPLETE THESE STEPS UNTIL BI-DIRECTIONAL METER IS INSTALL BY YOUR UTILITY COMPANY STEP BY STEP GUIDE TO TURNING ON YOUR MICRO-INVERTER PHOTOVOLTAIC SYSTEM

STEP 1. TURN AC DISCONNECT TO THE “ON” POSITION. WILL BE LABELED WITH “PHOTOVOLTAIC SYSTEM DISCONNECT”. DISCONNECT IS OPERATED WITH PULL OUT HANDLE INSIDE THE BOX (PHOTO A) OR A LEVER ON THE OUTSIDE OF THE BOX (PHOTO B)



Photo A



Photo B

STEP 2. TURN ON BREAKER LABLED PHOTOVOLTAIC SOLAR BREAKERS IN MAIN SERVICE PANEL (MSP) TO THE "ON" POSITION (PHOTO C)



Photo C

STEP 3. TURN HAND TURN DIAL DISCONNECT AT INVERTER (PHOTO D) TO "ON" POSITION



Photo D

STEP 4. WAIT FOR GREEN LED LIGHT TO APPEAR (GREEN LED LIGHT INDICATES THAT THE SYSTEM IS OPERATING PROPERLY)

Any questions or concerns about this process, please contact 772-631-1243 or greg@suncoolenergy.com

